

Lincoln Mark VII

1984 - 1992

Keyless Entry System (Keypad)

© The Lincoln Mark VII Club, Inc

Lincoln Mark VII

USING THE KEYLESS ENTRY SYSTEM

With the keyless entry system, you can lock or unlock the vehicle doors and trunk without using a key. The buttons for the system are above the outside door handle on the driver's side.

When Mark VII was made, the original owner was given a computer code that operates the system for your vehicle. For your convenience, they have duplicated this code four times.

The code is:

- On your owners' wallet card
- On a sticker on the lower left corner of the Owner Warranty Card
- Taped to the underside of the trunk decklid, normally on the inward side of the passenger's hinge
- Taped to the computer module in the luggage compartment on the underside of the package tray (this is the definitive number to operate the door as this is the actual module that stores the codes).

When you use this entry system, the illuminated entry system turns lights on and lights up the buttons. Do not push the buttons with a car key, ball point pen, pencil or any other hard object. These objects could damage the buttons.

Opening the doors with the keyless entry system

You must first unlock the driver's side before you unlock the other door or trunk. If you let more than five seconds pass between the numbers you press then you have to enter the code again. If the keyless entry system does not operate properly, use the key to unlock the doors or trunk.

1. To unlock the driver's door, enter the code. All codes have five numbers. After you press the fifth number, the driver's door unlocks.
2. To unlock the passenger's side door, enter the code; press the 3|4 button once within 5 seconds.
3. To unlock the trunk, enter the code; press the 5|6 button once within 5 seconds.

(Operations can be sequenced such as ***code-5/6-3/4*** to open the driver's door and the trunk and the passenger's door in that sequence)

Locking the doors with the keyless entry system

Along with unlocking your doors, you can use the keyless entry system to lock the doors. You can also use the AUTOLOCK feature to automatically lock the doors after you get in the car.

To lock all of the car doors at the same time, press 7|8 and 9|0 at the same time.

To have the doors lock automatically when you get inside the car, you may need to activate the AUTOLOCK system. You can activate or deactivate the system by using the buttons for the keyless entry system.

To activate the AUTOLOCK system:

1. Enter your code.
2. Within five seconds, press and hold 7|8.
3. Within five seconds, 3|4.

After you have activated the AUTOLOCK, all of the doors will automatically lock when:

- the car doors are fully closed
- the ignition key is turned to the ON position
- someone is sitting in the driver's seat or a heavy object is placed on it
- you shift through reverse

To deactivate the AUTOLOCK system, simply repeat the instructions for activating the system. By re-entering the code that activates the AUTOLOCK, the keyless entry system erases the automatic AUTOLOCK.

If your battery is disconnected or discharged for any reason, the AUTOLOCK feature is restored by using the keyless entry system. Also, you may restore the AUTOLOCK feature if you try to start your car with a weak battery. To erase the AUTOLOCK, follow the instructions above.

ACTIVATION OF THE POWER DOOR LOCKS, WHEN YOU OPERATE THE COURTESY/DOME LAMPS ON AND OFF WITH THE HEADLAMP SWITCH OR THUMBWHEEL SWITCH, IS A NORMAL CONDITION WITH THE KEYLESS ENTRY SYSTEM.

– Ford Motor Company Inc.

Programming your own entry code

You can program a personal code to unlock your vehicle. The code does NOT replace the code that is burned into the module in under the package tray.

To program your own code:

1. Enter your code.
2. Within five seconds, press 1|2.
3. Within five seconds, enter your new five digit personal code.
4. Wait six seconds. Your keyless entry system can be operated with your original code AND your personal code.

To erase your personal code:

1. Enter your code.
2. Within five seconds, press 1|2.
3. Wait six seconds. Your keyless entry system automatically erases your personal code.